



Mounting instructions


Changing a LEIF®-element

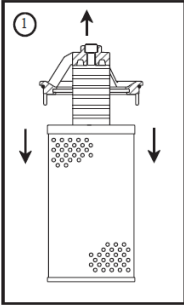

Remove the LEIF® element + sleeve.

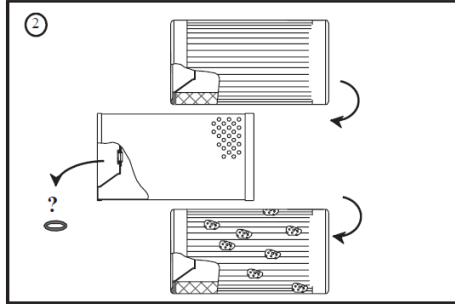

Take the used LEIF®-element out, preferable in a horizontal position, and **replace** with the new LEIF®-element. Check O-ring and **replace** if necessary.

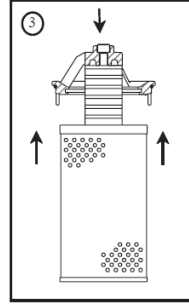


Mount the LEIF®-element + sleeve.


90.48.000.09

Mounting instructions


Interchanging a standard element with LEIF®-element

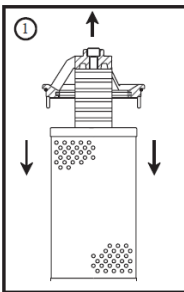


Remove the standard element.

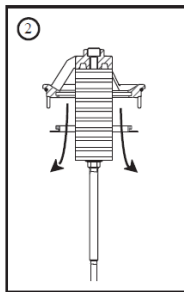

Remove the profile seal.

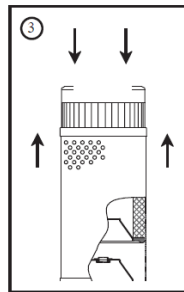

Mount the LEIF®-element in the sleeve.

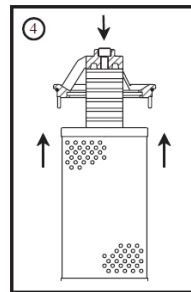

Mount the LEIF®-element + sleeve.

90.48.000.09



Hydraulic and Industrial Process Filtration EMEA (HIFE)
www.parker.com

ENGINEERING YOUR SUCCESS.