

# Parker Balston® Nitroflowlab External Filter Installation

## Installation Instructions



**These instructions must be thoroughly read and understood before installing and operating this product. If you have any questions or concerns, please call the Technical Services Department at 800-343-4048, 8AM to 5PM Eastern Time or email at [balstontechsupport@parker.com](mailto:balstontechsupport@parker.com) (North America only).**

For other locations, please contact your local representative or email at [TSGIndustrial.Enquiries@parker.com](mailto:TSGIndustrial.Enquiries@parker.com).

### Installing to Existing System

1. Remove fitting from end of shut off valve.
2. Install Filter Assembly to end of shut off valve.
3. Wrap removed fitting with thread seal tape.
4. Install fitting to Filter Assembly.
5. Test all joints for leaks.

### Installing to New System

1. Install Filter Assembly to end of shut off valve.
2. Install desired fitting to Filter Assembly (verify fitting is wrapped with thread seal tape).
3. Test all joints for leaks.



Figure 1: External Filter Installation

